

MOBILE CALL  
GSM Alarm System



## MOBILE CALL GSM Alarm System



### User's Manual

**Profile**

For a better understanding of this product, please read this user manual thoroughly before using it.

Thank you for purchasing this alarm system. For proper use and your safety, please read these instructions thoroughly and carefully before you put the system in use. Keep this manual carefully for your reference in the future.

## Precautions

Please read and follow the brief instructions below, otherwise physical danger or system damage may be incurred. This manual contains more detailed information about safety issues concerning the system in other parts hereof.



### Proper use

Read this manual carefully before you put the system in use. Operate in accordance with the instructions herein.



### Waterproofness

The alarm system is not waterproof. Please keep it dry.



### Qualified maintenance service

Only those qualified maintenance professionals may repair the alarm system.



### Backup

Be sure to back up all important information stored in the system.



### Original parts and batteries

Only original parts and batteries approved by manufacturer may be used, otherwise the warranty term may be breached and danger may occur.



### Addition of other equipment

Before adding other equipment, please read the user manual for detailed safety instructions. Be sure not to connect incompatible products to the system.



### Switch on safety

Do not switch the Device on when wireless phone use is prohibited or when it may cause interference or danger.



### Interference

All wireless devices may be susceptible to interference, which could affect performance.



### Switch off in restricted areas

Follow any restrictions. Switch the device off in aircraft, near medical equipment, fuel, chemicals, or blasting areas.

## CONTENTS

<b>Function Introduction</b>	3	<b>Delete SMS Receiving Number</b>	16
<b>Alarm Host Diagram</b>	4	<b>SMS Notification for Arm/Disarm</b>	16
<b>Door Sensor</b>	6	<b>Defense Zone Programming</b>	16
<b>Wireless PIR Detector</b>	7	<b>Home Arm Defense Zone Setting</b>	17
<b>Functions Settings</b>	7	<b>Voice Recording</b>	18
<b>Initialization</b>	7	<b>Arm/Disarm Siren Sound Setting</b>	18
<b>Enter Settings</b>	7	<b>Emergency Help Siren Setting</b>	19
<b>Exit Settings</b>	8	<b>Arm/Disarm Voice Prompt</b>	19
<b>Factory Reset</b>	8	<b>Alarm Protection All Settings</b>	19
<b>Coding of Remote Controller</b>	8	<b>IMEI Checking</b>	19
<b>Delete Remote Controller</b>	9	<b>Operation Instructions</b>	20
<b>Coding of Defense Zone</b>	9	<b>System Status</b>	20
<b>Delete Defense Zone</b>	10	<b>Remote Controller Operate</b>	20
<b>Change Password</b>	10	<b>Home Arm</b>	20
<b>Change Operation Password</b>	10	<b>Out Arm</b>	21
<b>Change Program Password</b>	11	<b>Disarm</b>	21
<b>Clock Setting</b>	11	<b>Answer Alarm Call</b>	22
<b>Timing Settings</b>	12	<b>Remote Control</b>	22
<b>Timely Arm</b>	12	<b>Emergency Help</b>	23
<b>Timely Disarm</b>	12	<b>System Dialing Function</b>	23
<b>Timing Control</b>	12	<b>Alarming Record Checking</b>	23
<b>Wireless Transmission Control</b>	13	<b>GSM Signal Checking</b>	24
<b>Wireless Siren Coding Encryption</b>	13	<b>Notes</b>	24
<b>Out Arm Delay Setting</b>	14	<b>Technical Parameters</b>	25
<b>Alarm Delay Setting</b>	14	<b>Components List</b>	26
<b>Alarm Number Setting</b>	14	<b>Care and Maintenance</b>	26
<b>Delete Phone Number</b>	15		
<b>SMS Number Setting</b>	15		



## Function Instruction:

### Function Instruction:

- 7 wired and 99 wireless defense zones;
- LCD screen with time clock display;
- Voice prompt for all operations;
- 3 groups of timely arm and disarm;
- Can store 6 phone numbers: when alarming, system will make alarm call to these numbers automatically;
- Can store 3 SMS numbers: when alarming, system will send alarming SMS automatically;
- 10-second automatic message recording;
- Built-in artificial intelligent digital voice announcer;
- Built-in artificial intelligent English message;
- Users can make calls by using keypad on alarm panel, just like a telephone;
- One-key-control function: Out Arm, Home Arm, Remote Arm;
- Arm/ disarm by SMS or call remotely;
- SOS, fire, gas, door, hall, window, balcony, and boundary places alarm;
- Real-time, delay, 24 hours, bypass defense zones programming function;
- Wireless coding: easy to add additional wireless accessories;
- Remote control Arm, Disarm, Monitor, and Intercom by phone;
- SMS alert for power failure or recovery;
- Built-in AAA NI-HI rechargeable battery: make alarm when power off.




## Alarm Host Diagram


### Alarm Host Diagram

In order to make the main unit get the wireless signal well for all wireless accessories, please put the alarm host at the central place of your defense area. Make sure it's away from large metal objects and household appliances which may cause high frequency interference, as well as barriers such as reinforced concrete wall or fire door, etc.

Alarm Panel front schematic diagram:

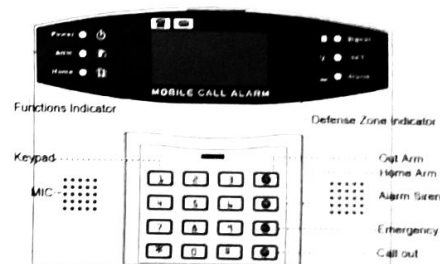


Alarm Panel back schematic diagram:

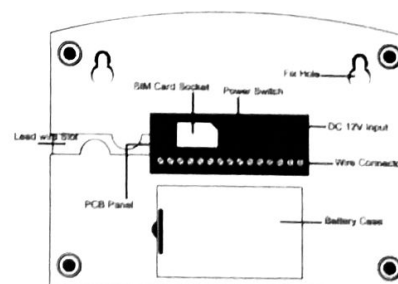



## Alarm Host Diagram

Wired terminal block:

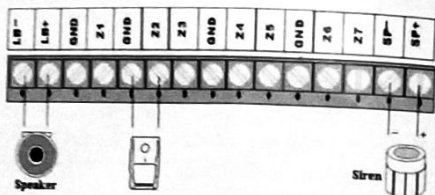

1	LB-	Negative of speaker (black cable)
2	LB+	Positive of speaker (red cable)
3	GND	Ground
4	Z1	Wired sensor 1: support both NO and NC
5	GND	Ground
6	Zone 2	Wired sensor 2: support both NO and NC
7	Zone 3	Wired sensor 3: support both NO and NC
8	GND	GND
9	Zone 4	Wired sensor 4: support both NO and NC
10	Zone 5	Wired sensor 5: support both NO and NC
11	GND	GND
12	Zone 6	Wired sensor 6: support both NO and NC
13	Zone 7	Wired sensor 7: support both NO and NC
14	SP-	Negative of siren (black cable)
15	SP+	Positive of siren (red cable)


Note:

- ◇ "LB-" and "LB+" are to connect external speaker. If you think the internal speaker is not loud enough, please contact us for professional speakers.
- ◇ Connect one cable of the wired sensor to GND and the other to "Z1/Z2/Z3.../Z7".
- ◇ Please pay attention to the siren connection. Do not mix the two cables together when connecting. Otherwise, it will damage the transistor in the main panel.




## Alarm Host Diagram

LCD display:

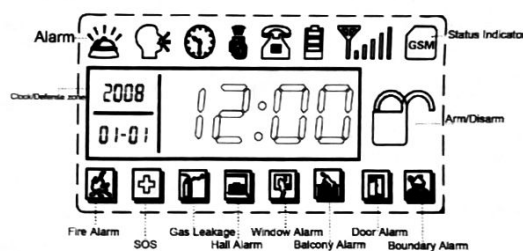

### 1. Door Sensor

- ◇ Door sensors are used for detecting the status of open and close of windows and doors. It will detect it and send the signal to main panel.
- ◇ Tear apart the double-side adhesive tape on the magnet and the transmitter. Then adhere them to the appropriate position.

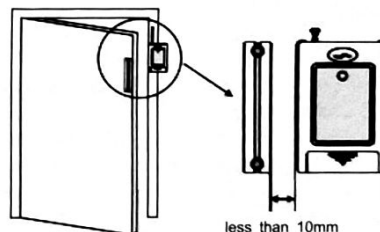

- ◇ Magnet should be near to the side of transmitter with indicator. The two should align with each other and the distance should not exceed 10mm.
- ◇ Please plug out the antenna for better signal.
- ◇ If the low-power indicator is on, please change the battery.



## Function Settings

### 2. Wireless PIR Detector

PIR detectors are used to detect the movement within a certain range.

- ❖ Fix the adjustment bracket on the wall with the provided screws and attach the detector to the bracket. It is recommended to mount it at a height of 2-2.2m above the floor.
- ❖ Effect of the PIR detection is best when the detection direction is in 90° angle with the walking direction of the intruder. Choose the most suitable installation place and angle according to actual situation and taking the following installation diagram as reference to ensure the detection effect is best.
- ❖ Please do not fix it under direct sunlight or other strong lights and also keep it away from places with frequent strong air stream.
- ❖ If the low-power indicator is on, please change the battery.



## Function Settings

### 1. Initialization

Please insert SIM card and plug in power adaptor, and then power on the system, all the LED lights will be on for 2 seconds and you will hear a long beep; the system comes into initialization. After the time clock displays on the LCD screen, the [GSM] starts flashing and the main unit starts to detect the GSM network until a long beep. Then the [GSM] indicator goes out indicating the system comes into disarm status.

Finally, turn on the backup battery switch.

### 2. Enter Settings

In the state of disarm, input 4-digit password by the keypad on the main unit and press [#] button to confirm. You will hear a voice prompt: please enter instruction. At the same time, [SET] indicator is on without flashing and [0000] displays on the screen, indicating the system enters setting status.



## Function Settings

 
You can perform different settings repeatedly as long as the system keeps in setting status. The system will exit setting mode and return to disarm status if you don't press any keypad button for 40 seconds.

**Note:** In setting status, press can delete the numbers input. The system default password is [8888].

Operating method: [XXXX][#]

X indicates the new 4-digit password.

LCD display:



### 3. Exit Settings

Press [\*] and [#] buttons, the main unit emits a long beep and exits settings. The [SET] indicator goes out and the system returns to disarm state.

Operating method: [\*] ⇒ [#]

### 4. Factory Reset

In disarm status, use keypad to input [95175308246] and press [#] to confirm, all the LED indicators will be on for 2 seconds and you will hear a long beep. The main unit gets all its settings cleared and restores to its factory settings successfully.

Operating method: [95175308246] + [#]

### 5. Coding of Remote Controller

**Extra remote controller has to be code to the alarm host in order to perform normally. The one in the standard package has been coded.**

In setup state, use keypad to input [20], input the remote controller number [1-8], and then press [#] to confirm. The main unit emits a long beep and you will hear "remote control coding". The indicator is on without flashing; press any button on the wireless remote controller, the main unit makes



 
## Function Settings

a long beep and you will hear "coding completed", [ ] indicator goes out, indicating the remote controller succeeds in coding.

Operating method: [20] [A] [#]

A indicates: 1~8 remote controllers number. You can add maximum 8 remote controllers.

LCD display:



### 6. Delete Remote Controller

**The remote controller can't control the main unit after it's deleted.**

In setup state, use keypad to input [21], then input the remote controller number [1-8], and then press [#] to confirm. The main unit emits a long beep and the [Signal] indicator flickers once. You will hear a voice prompt "delete completed".

Operating method: [21] ⇒ [XX] ⇒ [#]

A indicates: 1~8 remote controllers number.

### 7. Coding of Defense Zone

**Wireless detectors have to be coded to the main unit in order to trigger it alarm. The wireless PIR and door sensor in the standard package have been coded.**

In setup state, use keypad to input [23], input the defense zone number you want to code [01~99], and then input [#] to confirm. The main unit emits a long beep and the corresponding defense zone is displayed on the screen. You will hear a voice prompt "detector coding". Then trigger a wireless detector to emit a wireless signal; after receiving the signal, the main unit makes a long beep, and you will hear "coding completed", the [ ] indicator goes out at the same time.

 


## Function Settings

Operating method: [23] ⇒ [XX] ⇒ [#]

XX indicates: 01 ~99 defense zones number

LCD display:



### 8. Delete Defense Zone

**The wireless detector can't control the main unit after it's deleted.**

In setup state, use keypad to input [24], then input the defense zone number you want to delete [01~99], and then input [#] to confirm. The main unit emits a long beep and the defense zone indicator flickers once. You will hear a voice prompt "delete completed".

Operating method: [24] ⇒ [XX] ⇒ [#]

XX indicates: 01 ~99 defense zones number

### 9. Change Password

#### 1) Change Operation Password

**Operation password is the password used to disarm or remote control.**

In setup status, use keypad to input [30], then input the 4-digit new password, and then press [#] to confirm. The main unit will make a long beep and you will hear a voice prompt "setting completed".

 
Operating method: [30] ⇒ [XXXX] ⇒ [#]

XXXX indicates: the new 4-digit password

For example: change the system password to 1012

Operating method: [30] ⇒ [1012] ⇒ [#]

LCD display:





## Function Settings

### 2) Change Program Password

**Program password is the password you should input in order to setup the system.**

In setup status, use keypad to input [31], then input the 4-digit new password, and then press [#] to confirm. The main unit will make a long beep and you will hear a voice prompt "setting completed".

 
**Operating method:** [31] ⇨ [XXXX] ⇨ [#]

XXXX indicates: the new 4-digit password

**For example:** change the system password to 2846

**Operating method:** [31] ⇨ [2846] ⇨ [#]

LCD display:



**Note:** The operation password and the programming password can not be set as the same number.

### 10. Clock Setting

In setup status, use keypad to input [32], then input the last 2 digits [AA] of the present year, the two digits [BB] of the month, the two digits [CC] of the date, the two digits [DD] of the hour (24-hour system), the two digits [EE] of the minute, the two digits [FF] of the second, and finally enter [#] to confirm. You will hear a long beep and a voice prompt "setting completed".

**Operating method:** [32] ⇨ [AA] ⇨ [BB] ⇨ [CC] ⇨ [DD] ⇨ [EE] ⇨ [FF] ⇨ [#]

AA indicates: the last 2 digits of the present year

BB indicates: the 2 digits of the present month

CC indicates: the 2 digits of the present date

DD indicates: the 2 digits of the present hour

EE indicates: the 2 digits of the present minute

FF indicates: the 2 digits of the present second

**For example:** set the time as 15:35:40, Oct. 1st, 2009

**Operating method:** [32] ⇨ [09] ⇨ [10] ⇨ [01] ⇨ [15] ⇨ [35] ⇨ [40] ⇨ [#]



## Function Settings

### 11. Timing Settings

#### 1) Timely Arm

In setup status, use keypad to input [33~35], then input the hour [AA] and minute [BB] of the time you want to set to arm, and finally input [#] to confirm. You will hear a long beep and a voice prompt "setting completed".

**Operating method:** [XX] ⇨ [AA] ⇨ [BB] ⇨ [#]

XX indicates: the address code 33, 34, 35 of the timely arming

 
AA indicates: the hour of the setting time

BB indicates: the minute of the setting time

**For example:** set the arm time as 45' 10pm

**Operating method:** [33] ⇨ [22] ⇨ [45] ⇨ [#]

LCD display:



#### 2) Timely Disarm

In setup status, use keypad to input [36~38], then input the hour [AA] and minute [BB] of the time you want to set to disarm, and finally input [#] to confirm. You will hear a long beep and a voice prompt "setting completed".

**Operating method:** [XX] ⇨ [AA] ⇨ [BB] ⇨ [#]

XX indicates: the address code 36, 37, 38 of the timely disarming

 
AA indicates: the hour of the setting time

BB indicates: the minute of the setting time

**For example:** set the arm time as 55' 7am

**Operating method:** [33] ⇨ [22] ⇨ [45] ⇨ [#]

LCD display:



#### 3) Timing Control

In setup status, use keypad to input [39], then input the number indicating turning on timely arm/ disarm [1/0], and then input [#] to confirm.



## Function Settings

You will hear a long beep and a voice prompt "setting completed". The factory default is off.

**Operating method:** [39]⇒[0/1]⇒[#]

0: turn off the function of timely arm/ disarm

1: turn on the function of timely arm/ disarm

**For example:** turn on the function of timely arm/ disarm

**Operating method:** [39]⇒[1]⇒[#]

### 12. Wireless Transmission Control

This function is optional. We can make the control panel with built-in transmitter, so that it would be more convenient to work with wireless siren. Only the panel with built-in transmitter has this function.

In setup status, use keypad to input [41], then input the number [1/0], and then input [#] to confirm. You will hear a long beep and a voice prompt "setting completed". The factory default is off.

**Operating method:** [41]⇒[0/1]⇒[#]

 
0: turn off the function of wireless transmission

1: turn on the function of wireless transmission

**For example:** turn on the function of wireless transmission

**Operating method:** [41]⇒[1]⇒[#]

LCD display:



**Note:** after activating this function, do as follows to set the wireless siren with the alarm panel.

**Input [411#], and then make the siren you want to set into coding status, finally press [0#] on the panel.**

**Pressing [0#] means the panel will make coding signal to the siren, this signal will last for 3 seconds. So please make sure the siren is in coding status during this 3-second period.**

### 13. Wireless Siren Coding Encryption



## Function Settings

Only the panel with built-in transmitter has this function.

The signal used to code with the wireless siren is sent from the internal transmitter of the main panel. The signal codes of this product from our company are the same. If you and your neighbor both are using this product, the alarm signal from your neighbor may cause your siren sound. So it is recommended to encrypt the wireless siren to avoid the interference.

In setup status, use keypad to input [43], then input the number [01] ~ [99], and then input [#] to confirm. You will hear a long beep and a voice prompt "setting completed".

 
**Operating method:** [43]⇒[A]⇒[#]

A indicates: the code number 01~99

**For example:** set the wireless coding number as 10

**Operating method:** [43]⇒[10]⇒[#]

LCD display:



**Note:** Before you pairing the main panel with the wireless siren, you Must Set the main panel's Encryption codes.

### 14. Time Setting of Out Arm Delay (Default: 60 sec)

In setup state, input the command: 44 + [XX] + #

XX indicates: the delay time of out arm; XX= 01-99: 1 sec to 99 sec

**Note:** The setting is effective only with the panel keyboard operation. The operation by remote controller or SMS is immediate arm without delay.

### 15. Time Setting of Alarm Delay (Default: 40 sec)

In setup state, input the command: 45 + [XX] + #

XX indicates: the delay time of alarm; XX= 01-99: 1 sec to 99 sec

**Note:** The setting is effective only when a zone is set as Alarm Delay Zone. Before the system enters arm or alarm status it will emit a "Di" sound per second.





## Function Settings

### 16. Alarm Number Setting

In setup state, input [51] ~ [56], then input the voice alarm-receiving number (mobile number or telephone number), and then press [#] to confirm. The main unit will make a long beep, the [Signal] indicator will flicker once, and you will hear "setting completed", which indicate voice alarm-receiving number is set successfully.

Operating method: [XX] ⇨ [YY...YY] ⇨ [#]

 
**XX** indicates: the 1- 6 alarming user number [51] ~ [56]

**YY...YY** indicates: voice alarm-receiving phone number

For example: set 13811111111 as the first voice call number

Operating method: [51] ⇨ [13811111111] ⇨ [#]

LCD display:



### 17. Delete Phone Number

In setup state, input [51] ~ [56], and then press [#] to confirm, the main unit will make a long beep and the [Signal] indicator will flicker once and you will hear "delete completed", which indicate the alarming user number is deleted successfully.

 
Operating method: [XX] ⇨ [#]

**XX** indicates: the 1- 6 alarming user number [51] ~ [56]

For example: Delete the third alarming user number from the system.

Operating method: [53] ⇨ [#]

LCD display:



### 18. SMS Receiving Number Setting

SMS Receiving number means when system is alarming, it will only send SMS to this mobile number. You can set maximum 3 SMS numbers.

In setup state, input [57] ~ [59], then input the SMS receiving number, and then press [#] button to confirm. The main unit will make a beep, the [Signal] indicator will flicker once and you will hear "setting completed", which indicate setup successfully.



## Function Settings

Operating method: [XX] ⇨ [YY...YY] ⇨ [#]

**XX** indicates: address codes of message-receiving numbers from the first group to the third group [57] ~ [59]

**YY...YY** indicates: the SMS receiving number

For example: setup 13822222222 as the first SMS receiving number

Operating method: [57] ⇨ [13822222222] ⇨ [#]

### 19. Delete SMS Receiving Number

In setup state, use keypad to input [57] ~ [59], and then press [#] button to confirm. The main unit will make a beep, the [Signal] indicator will flicker once and you will hear "delete completed", which indicate SMS number is deleted successfully.

Operating method: [XX] ⇨ [#]

**XX** indicates: address codes of message-receiving numbers from the first group to the third group [57] ~ [59]

For example: delete the first SMS user number from the system

Operating method: [57] ⇨ [#]

### 20. SMS Notification for Arm/Disarm (Default: OFF)

In setup state, input the command 77 + [1/ 0] + # (1: ON, 0: OFF)

After starting this function, the system can send SMS to three SMS receiving numbers (57~59 as mentioned above) when the system enters arm/ disarm status through wireless remote controllers or its panel keyboard operation.

### 21. Defense Zone Programming

If you want to change the alarm attribute of defense zone, such as turn off the siren when system alarms, you can do it by defense zone programming. In setup state, first input [60], then the defense zone number [01~99], then input defense zone type [1~4], then input defense zone location number [1~8], and then select siren on/off [0/1], at last press [#] to confirm. You will hear the main unit emit a long beep and a voice prompt "setting completed".



## System Settings

Operating method: [60] ⇒ [AA] ⇒ [C] ⇒ [0] ⇒ [#]

**AA:** defense zone number [0]~[99] defense zone 1 to zone 99;

**B:** defense zone type

[1]: real-time defense zone [2]: 40 seconds delay defense zone  
[3]: 24 hours defense zone [4]: bypass defense zone

**C:** alarm type

[1] SOS Alarm [2] Fire Alarm [3] Gas Leak Alarm  
[4] Door Alarm [5] Hall Alarm [6] Window Alarm  
[7] Balcony Alarm [8] Boundary Alarm

After setting the alarm type, the corresponding alarm type icon will be shown on the LCD screen when alarming. And you will hear the alarm type voice prompt when answering the alarm call.

**D:** siren ON/OFF: [0] OFF, [1] ON

For example: set defense zone 12 to be 24-hour, fire alarm and siren on

Operating method: [60] ⇒ [12] ⇒ [3] ⇒ [2] ⇒ [1] ⇒ [#]

## 22. Home Arm Defense Zone Setting

Home arm defense: sometimes (for example, when you are at home), you want some of the sensors work while some do not, you can do this setting.

In setup state, use keypad to input [61], then choose the corresponding defense zone number [01~99], then choose [Home Arm], and then choose whether alarm [0/1] button, and finally press [#] to confirm. The main unit will make a long beep and a voice prompt "setting completed".

Operating method: [61] ⇒ [XX] ⇒ [A] ⇒ [#]

XX indicates: [01~99] is defense zone 1 to defense zone 99

A indicates: [0] no alarm under home arm status even the sensor is triggered

[1] alarm under home arm status

Example: set sensor in defense zone 10 make alarm under home arm status



## Function Settings

Operation: [61] ⇒ [10] ⇒ [1] ⇒ [#]

After this setting, when you "home arm" the system, sensor in defense zone 10 will work normally.

Example: set sensor in defense zone 55 not make alarm even when it's triggered under home arm status

Operation: [61] ⇒ [55] ⇒ [0] ⇒ [#]

After this setting, when you "home arm" the system, sensor in defense zone 55 will not work.

 
## 23. Voice Recording

In setup state, use keypad to input [701], and then press [#] to confirm.

The main unit will emit a beep and the [ ] indicator is on, and after 10 seconds countdown, recording starts: record at 30cm away from the main unit with moderate tone; 10 seconds later, the main unit will make a beep indicating the recording stops and the recorded voice will replay.

Operating method: [701] ⇒ [#]

LCD display:



## 24. Arm/ Disarm Siren Sound Setting

After you activate this function, when you arm the system, the external siren will sound one short beep; and when you disarm it, there will be two short beeps.

In setting status, use keypad to input [75], then [0/1] and finally press [#] to confirm; voice prompts: setting completed, please enter instruction".

 
Operating method: [75] ⇒ [A] ⇒ [#]

A indicates: [0] Siren off; [1] Siren on; System default: [0] Siren off

For example: set siren on when arm/ disarm

Operating method: [75] ⇒ [1] ⇒ [#]

LCD display:



## Function Settings

### "Emergency Help" mode

Use keypad to input [76], and then [1/0], finally press [#] to confirm. The main unit will make a long beep and a voice prompt "setting completed".

Operating method: [76] ⇨ [A] ⇨ [#]

A indicates: [0]: siren off in "Emergency Help" mode

[1]: siren on in "Emergency Help" mode

System default: [0] siren off

### 26. Arm/ Disarm Voice Prompt

This product has this function: when you arm/ disarm it, it will give voice prompt "system armed/ disarmed". You can deactivate it if you do not need.

In setting status, first input [83], then [0/1] and finally press [#] to confirm; voice prompts: setting completed, please enter instruction.

Operating method: [83] ⇨ [A] ⇨ [#]

A indicates: [1]: activate voice prompt for arm/ disarm (factory default)

[0]: deactivate voice prompt for arm/ disarm

### 27. Voice Prompt for All Settings

For above settings, you could hear the voice prompt such as "setting completed, please enter instruction", "delete completed". You can deactivate the voice if you do not need them.

In setting status, first input [84], then [0/1] and finally press [#] to confirm; voice prompts: setting completed, please enter instruction.

Operating method: [84] ⇨ [A] ⇨ [#]

A indicates: [1]: activate voice prompt for arm/ disarm (factory default)

[0]: deactivate voice prompt for arm/ disarm

**Note: after you deactivate this function, all the voice including arm/ disarm voice would not work.**

### IMEI Checking

## Operation Instructions

In setting status, first input [88] and then press [#] to confirm. The 15-digit IMEI code will be displayed on the screen. It will display 4 digits each time.

### Operation Instructions

#### 1 System status

There are 4 status as following.

- Arm: defense zone 1~99 will alarm when detectors are triggered
- Home Arm: in arm status, the defense zone which is set as [Home Arm] will alarm when detectors are triggered
- Disarm: defense zone 1~99 will not alarm when detector triggered (except 24 hours defense zone)
- System setup status: In this status, all defense zones will not alarm when detectors are triggered


#### 2 Remote Controller Operation

Users can use remote controller to set system as Out Arm, Home Arm, Emergency Alarm, Real-time Disarm and etc.

- Out Arm: Press  button
- Home Arm: Press  button
- Emergency Alarm: Press  button, system will alarm at once
- Disarm: Press  button

 
#### 3. Home Arm

It means, for the safety, while somebody is at home, you need to enable the peripheral door, window, balcony and boundary detectors of the alarm system while prevent from triggering the indoor detectors, which may cause improper warning, then, you shall select Arm at Home, let just part of the detectors work and disable the other parts.

Main Unit Operation: Press [At Home ] button on keypad

Remote Control Operation: Press [] button on remote controller

LCD display:





## Operation Instructions

 
### 4. Out Arm

It means to guard all around your house while everyone is going out; all the detectors of the host are always working; when the detector is triggered by detecting source (anti-theft, fire prevention, gas leak, etc.), the alarm system will sound the alarm.

Press [Out Home] button on keypad, system will make a beep per second and totally 100 beeps. The [OUT ARM] indicator will be on without flashing. It means Out Arm is set successfully.

**Arm Operation:** Press [Out Home] button, the system will enter arm status 100 seconds later.

LCD display:



You can also set out arm by SMS remotely. The SMS command is: Remote Control Password (Default: 1234) + [1]

After the setting, the host makes a "Di" sound, ARM LED is on and you will receive a SMS: System armed.

### 5. Disarm

 
It means to stop the alarm when the main unit sounds the alarm or make the alarm system in the state of non-warning. After disarming, even if you trigger the detector, the main unit would not sound alarm (excluding 24-hour defense areas).

Use keypad to input system password, then press [#] button. [Out Home] or [At Home] lights will be off. It means disarm setting successful.

**Remote Control Operation:** Press [ ] button on remote controller

**Main Unit Operation:** input system password + [#]

LCD display:



## Operation Instructions

You can also set disarm by SMS remotely. The SMS command is: Remote Control Password (Default: 1234) + [2]

After the setting, the host makes "Di" sound, ARM LED is off and you will receive a SMS: System disarmed.

**Note:** If you send arm or disarm SMS by the mobile phone number stored in the system before (refer to "SMS Receiving Number Setting"), you will receive two arm/disarm SMS.

### 6. Answer Alarm Call

When the main unit sounds alarm, it will dial the preset numbers. If no one answers the call, the system will call the next user number automatically. The system will call each preset numbers for 3 times in order.

If you answer the call, you will hear the pre-record voice. You can set system via your telephone or mobile phone keypad.

If you hang up directly without answering the call, the system will call each preset number for 3 times circularly.

**Press [\*]** Read the alarm information

**Press [1]** Main unit stops alarming and Arm. It stops calling users.

**Press [2]** Main unit stops alarming and Disarm. It stops calling users.

**Press [3]** Siren off and monitors the scene for 30 seconds; for continued monitoring, press [3] again to monitor for another 30 seconds.

**Press [4]** Main unit starts a 30-second two-way intercom. It cannot be controlled by the mobile during the time of intercom.

### 7. Remote Control

If the monitor is associated to the alarm main unit by phone (mobile phone), and after ringing cycle, you can hear a voice prompt: "Please enter password." If the password is right, you will hear: "Press 1 to arm, Press 2 to disarm, Press 3 to Monitor, Press 4 to Intercom." If the password is wrong, you will hear a prompt voice: "wrong password, please re-enter."



## Alarming Record Checking



**Press [1]:** arm, if finished successfully, you will hear a voice prompt "System armed".

**Press [2]:** disarm, if finished successfully, you will hear a voice prompt "System disarmed".



**Press [3]:** monitoring for 30 seconds, to continue monitoring, press [3] again to monitor for another 30 seconds.

**Press [4]:** two-way intercom for 30 seconds. You can't operate the main unit during this time.

### 8. Emergency Help

Press [Emergency ] button on keypad, or [] button on remote controller or wireless panic button, the main unit will alarm and make call to the preset user numbers.

 
### 9. System Dialing Function

In disarm status, you can use the main unit to make any call just like a land-line telephone. Dial telephone number on keypad, press [] button, the main unit will make a beep and the [Signal] indicator will be flashing. After the call, press [] button again, the main unit will be in disarm status.

### Alarming Record Checking


In disarm state, input [\*0#], then the main unit will make a long beep and enters the state of alarm record checking. After displaying the alarm and defense zone number indicator, the LCD screen will display the exact alarming time of this defense zone. Press 2, you can upturn to check the previous alarming record; press 8, downturn to check; and press [\*#] to exit checking.

**For example:** the 51st defense zone; the 7th alarming; alarming time: 12:10, August 1st, 2008. LCD display for one second,



## GSM Signal Checking

 and then display the alarming time:



You can also check the alarm records by SMS (Max: Latest 9 records).  
SMS Check Command: Remote Control Password (Default: 1234) + [3]

Reply SMS:

Eg: Alarm record:

NO1 Zone: 05 TIME: 11-06-25 11:37


(It indicates the first record: wireless zone 5 alarm time)

NO9 Zone: 19 Time: 11-06-25 11:45


(It indicates the first record: wireless zone 19 alarm time)

### GSM Signal Checking

 Before installing the main unit, you should check the signal of the installing place in order to ensure the unit can perform well. In setup state, input [81] ⇔ #, the main unit will make a long beep and display 00+XX (XX indicates the intensity of the signal). And the intensity should be within the range of 07-31; if it's less than 07, you should change place.

This icon  indicates the signal intensity. When the intensity number is 0-7, this icon will not be shown; when it's 8-15, this icon will be flashing; when the number is larger than 16, this icon will be on the screen without flash.

For example: if the signal intensity is 12, it will display as:



Note:

**Only under Out Arm status, the system has the function of sending SMS alert for power failure/ power recovery. While in Disarm or Home Arm status, it does not.**

**The SMS content:**

**Power failure: Power charger off**

**Power recovery: Power charger on**

## Technical Parameters

### Technical Parameters

#### List 1:

Input Voltage	DC12V/1A
Standby Current	<5mA
Alarm Current	<450mA
Wireless Frequency	315/433MHz, PT2262/EV1527, 4.7M
GSM Frequency	850/ 900/ 1800/ 1900MHz
Back-up Battery	Ni-Hi AAA*6 DC7.2V
Siren Volume	110dB

#### List 2:

Defense Zone	Arm	Home Arm		Alarm Information	Siren
Zone 1	effective	invalid	real-time	Door alarm	yes
Zone 2	effective	invalid	real-time	Wall alarm	yes
Zone 3	effective	effective	real-time	Window alarm	yes
Zone 4	effective	effective	real-time	Balcony alarm	yes
Zone 5	effective	effective	24 hours	Fire alarm	yes
Zone 6	effective	effective	24 hours	Gas alarm	yes
Emergency button	effective	effective	24 hours	Emergency alarm	no
Zone 7-80	effective	invalid	real-time	Emergency alarm	yes
Wireless defense zone (80-90)	effective	invalid	real-time	Emergency alarm	yes
Operation Password	6666	Remote control	On		
Remote control Password	1234	Siren	Off		
Siren sound time	180 sec	Home Appliance	Optional		

### Components List

Microcontroller	1
Power supply module	1
Relay module	1
RF module	1
Display module	1
Power supply module	1
RF module	1

### Care and Maintenance

The alarm system is a high-tech product, and its performance is affected by the environment. To ensure the system's performance, please follow the following suggestions:

- Please do not touch the anti-theft device directly, otherwise it will be damaged.
- Keep the alarm system dry. Do not use it in a wet environment.
- Please do not use a high-pressure water gun to clean the device. Please use a soft cloth to clean the device.
- Please do not use a high-pressure water gun to clean the device. Please use a soft cloth to clean the device.
- Please do not use a high-pressure water gun to clean the device. Please use a soft cloth to clean the device.
- Please do not use a high-pressure water gun to clean the device. Please use a soft cloth to clean the device.
- Please do not use a high-pressure water gun to clean the device. Please use a soft cloth to clean the device.



## Care and Maintenance

### Check the main unit every three months:

1. Whether it can arm/disarm normally;
2. Whether it can dial the number for alarm normally;
3. Whether it can receive wireless detectors' signal normally;
4. Whether the back-up battery can work normally.

### Check the wireless detectors once a month:

1. Trigger wireless detectors to see if system can alarm normally;
2. Check all detectors' batteries to see if it's in low voltage;
3. Check whether wireless detectors can send signal to the main unit normally.

### Check the SIM card:

1. Check the use of SIM card, such as network signal, balance, etc.
  2. Make sure the PIN code verification of the SIM card is closed.
  3. Please keep the password and SIM card number safe, in case that other people remote control the system illegally.
- ◆ Since the alarm system is continuously in operation or standby mode, the supply adaptor of the control panel shall be connected to a safe and reliable socket.
  - ◆ Do not place the system near your bedroom or office table, because the siren will make high-loudness sound in the case of alarm, which may adversely affect your rest or work.
  - ◆ If the alarm system will not be used for a long time, please disconnect the system from the power supply.
  - ◆ Please do not disassemble, repair or alter the products without permission, or it may cause accidents and faults.
  - ◆ Do not drop this product on the ground or on hard objects, as it may lead to massive impact to cause faults and damages.
  - ◆ Without approval and consent of relevant authorities, please do not set "110", "119" or the alarm phone number of police station for this main unit.

Please read the suggestions above carefully and follow the instructions herein. If any of the equipment does not work properly, please send it to the dealer or authorized service point for repair. We will try our best to solve the problem for you as soon as possible.




## Care and Maintenance

### The following sensors are optional:



Optional sensors/detectors are packed separately. They include remote controller, outdoor siren, transmitter, wireless PIR, wireless gap sensor, wireless gas detector, wireless smoke detector, panic button, baluster, etc. You can choose according to your specific requirements.

### Typical house configuration

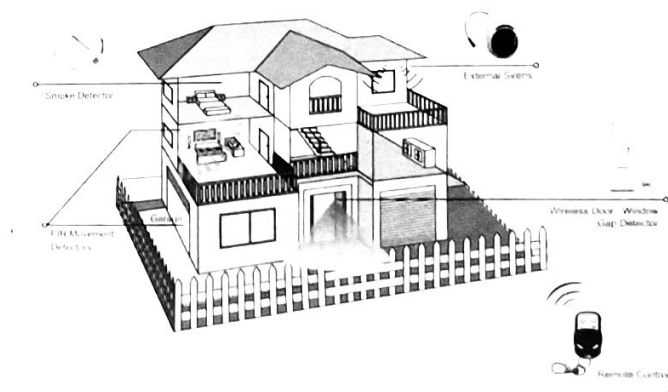



## Care and Maintenance

Operation Commands	CommandsFunction	DescriptionRemarks
[Program Password] + [#]	Enter settings	Default password: 8888
[*] + [#]	Exit settings	
[20] + [1-8] + [#]	Coding of Remote Controller	Max 8 remote controllers
[21] + [1-8] + [#]	Delete Remote Controller	
[23] + [01-99] + [#]	Coding of Defense Zones	Defense Zones Number: 01-99
[24] + [01-99] + [#]	Delete Defense Zones	Defense Zones Number: 01-99
[30] + [password] + [#]	Change Operation Password	Default: 1234
[31] + [password] + [#]	Change Program Password	Default: 8888
[32] + [AA] + [BB] + [CC] + [DD] + [EE] + [FF] + [#]	System Time Setting	[AA]: year [BB]: month [CC]: date [DD]: hour [EE]: minute [FF]: second
[33-35] + [AA] + [BB] + [#]	Timely Arm	3 groups of auto arm time [AA]: hour [BB]: minute
[36-38] + [AA] + [BB] + [#]	Timely Disarm	3 groups of auto disarm time [AA]: hour [BB]: minute
[39] + [0/1] + [#]	Timing Control: turn on/off the function of timely arm/disarm	0: OFF 1: ON
[41] + [0/1] + [#]	Wireless Transmission Control	0: OFF 1: ON
[43] + [01-99] + [#]	Wireless Siren Coding Encryption	Siren coding number: 01-99
[44] + [01-99] + [#]	Out Arm Delay Time Setting	Default: 60seconds
[45] + [01-99] + [#]	Alarm Delay Time Setting	Default: no delay
[51]-[56] + Phone number + [#]	Alarm Number Setting	6 groups of alarming user number
[51]-[56] + [#]	Delete Phone Number	
[57]-[59] + Phone number + [#]	SMS Receiving Number Setting	3 groups of SMS receiving number
[57]-[59] + [#]	Delete SMS Receiving Number	
[77] + [1/0] + [#]	SMS Notification for Arm/Disarm	
[90] + [AA] + [BB] + [C] + [D] + [#]	Defense Zone Programming	AA: Defense zone number: [01-99] B: Defense zone type: [1]real-time; [2] 40 seconds delay; [3]24 hours; [4] bypass C: Defense zone location: [1]SOS Alarm; [2] Fire Alarm; [3]Gas Leak Alarm; [4]Door Alarm; [5]Hall Alarm; [6]Window Alarm; [7]Balcony Alarm; [8]Boundary Alarm D: Siren ON/OFF [0] OFF; [1] ON
[61] + [01-12] + [0/1] + [#]	Home Arm Defense Zone Setting	Defense zone number: 01-12; [0] Home arm but not alarm; [1] Home arm and alarm
[70] + [1] + [#]	Voice Recording	10 seconds



## Care and Maintenance

Operation	CommandsFunction	DescriptionRemarks
[75] + [0/1] + [#]	Siren Setting	[0]: off (default); [1]: on
[76] + [0/1] + [#]	Siren Setting in "Emergency Help" mode	[0]: off (default); [1]: on
[81] + [#]	GSM Signal Checking	Intensity: 07-31 (# it's less than 07, you should change place.)
[83] + [0/1] + [#]	Arm/Disarm Voice Prompt	[0]: off; [1]: on (default)
[84] + [0/1] + [#]	Voice Prompt for All Settings	[0]: off; [1]: on (default)
[88] + [#]	IMEI Checking	
[*] + [0] + [#]	Alarming Record Checking	Press 2: uptime Press 8: downtime Press [*]: Exit
[Dial telephone number] + [*]	System Dialing Function	
[95175308246] + [#]	Factory Reset	Use with caution
[operation password] + [1]	Arm by SMS	Default operation password: 1234
[operation password] + [2]	Disarm by SMS	Default operation password: 1234
[operation password] + [3]	Alarm Record Checking by SMS	Default operation password: 1234



